

Tel:0828570324

012 5673618

Email: Info@cfptechnologies.co.zawww.cfptechnologies.co.za

Veichi AC10 VFD Basic settings

Parameter	Description	Value
F01.02	Frequency adjust. On board potentiometer	1
F01.10	Maximum Frequency in Hz (Speed)	As required
F01.12	Upper limit Frequency in Hz (Speed)	As required
F01.13	Lower limit Frequency in Hz (Speed)	As required
F01.22	Acceleration Time in seconds	As required
F01.23	Deceleration time in seconds	As required
F07.15	<i>Cut motor power at 0Hz</i>	1

<i>F00.03**</i>	<i>Factory Defaults reset. Change value to 22</i>
-----------------	---

** Will reset all settings back to factory defaults.

For Veichi AC10 external keypad, set the following:

Parameter	Description	Value
F11.30	AC10 Serial port function (External Keypad)	1
F11.35	AC10 external keypad potentiometer activation	1