


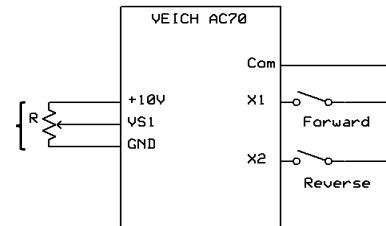

Veichi AC70 VFD

External latching switch configuration (If required)

AC70E Connector nr.
X1 (Forward)
X2 (Reverse)
COM
GND (ext pot)
VS1 (ext pot)
+10V (ext pot)
Earth (E)



Change the following parameters on Veichi AC70E

Parameter	Parameter Description	Value
F-01	X1 Forward Run	27
F-02	X2 Reverse Run	28
F-08	Terminal Command Mode	0
E-01	External Terminal Control	1
E-02	External Potentiometer (if required)	2
F-57	External I/p (VS) maximum frequency	=E9

Optional settings

Parameter	Value
E-09	Maximum Frequency allowed in Hz
E-10	Upper Limit Frequency in Hz
E-11	Lower Frequency limit in Hz
E-13	Acceleration Time in seconds
E-14	Deceleration time in seconds