

Veichi AC01 VFD. Onboard Keypad operation

Change the following parameters on Veichi AC01

Parameter	Parameter Description	Value
F05.00	X1 Forward Run	1
F05.01	X2 Reverse Run	2
F05.20	Terminal control mode. 2 wire configuration	0
F01.01	Terminal command	0
F01.02	External Potentiometer if required	0

** Default values.

Optional settings

Parameter	Value
F01.10	Maximum Frequency in Hz (Speed)
F01.12	Upper limit Frequency in Hz (Speed)
F01.13	Lower limit Frequency in Hz (Speed)
F01.22	Acceleration Time in seconds
F01.23	Deceleration time in seconds

<i>F00.03**</i>	<i>Factory Defaults reset. Change value to 22</i>
-----------------	---

** Will reset all values back to factory defaults